


ST.020 AUTOMATIC AIR LEAKAGE TESTING

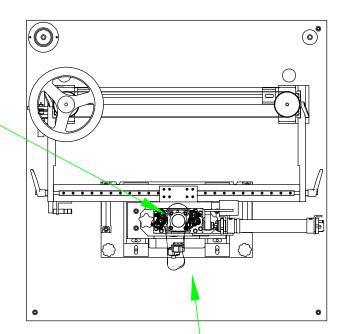

ST.010

MANUAL UNLOADING OF THE TESTED FAUCET AND LOADING OF THE FAUCET TO BE TESTED, WITH SCREWING ONTO THE FIXTURE

TESTING BENCH FOR FAUCETS WITH 2 HEADWORKS